


CP - DB Cabinets

Instructions for attaching drawer front to dove tail drawer boxes

Please refer to these measurements when screwing drawer fronts to drawer boxes on CP drawer base cabinets

*** DO NOT OVER TIGHTEN SCREWS ***

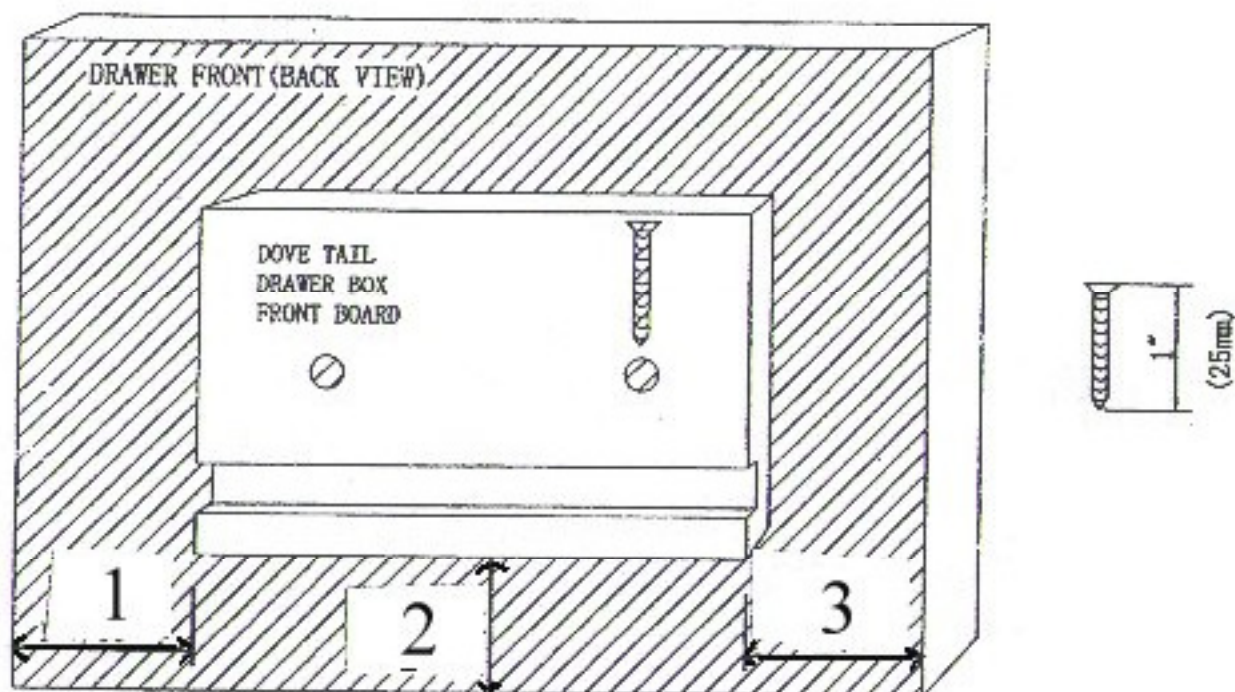

Position	Top Drawer	Middle Drawer	Bottom Drawer
1	42 mm / 1-5/8"	42 mm / 1-5/8"	42 mm / 1-5/8"
2	45 mm / 1-3/4"	47 mm / 1-7/8"	50 mm / 2"
3	42 mm / 1-5/8"	42 mm / 1-5/8"	42 mm / 1-5/8"